

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

WARNINGS

- Dispose of all packing carefully and responsibly.
- Place product on an even surface prior to using.
- Suitable for Domestic Garden use only.
- Children should not be left alone in situ with product, please refrain children climbing onto the product.
- Frequently check any damage to the product including the underside and tighten fixings where required.
- Please use appropriate furniture covers when not in use. With all product, it must be protected from the elements. If it is left in sunlight without covering, it will begin to fade in colour. Please make sure to remove all debris / dirt before covering.
- In order to prolong the life of your product, we recommend it be stored in a dry and protected area during off season periods.
- Do not use a pressure washer to clean your product.
- Check you have all the components and tools listed before assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the parts during assembly, this could cause damage.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Do not sit or stand on the table.
- To prevent scratches, avoid sharp objects on surface and do not place hot items directly onto the surface.
- Avoid "ring marks" and scratches by using coasters, mats or runners.

CARE/CLEANING

- Do not use any abrasive substances which may scratch the surface.
- Remove all debris / dirt with soft bristle brush / cloth, use a clean cloth to wipe clean any problem areas. For thorough cleaning, use a mild soap and warm water, apply with a micro fibre cloth (no abrasive materials), wipe clean and let dry.
- Give your hardwood furniture a yearly scrub with soapy water, followed by a thorough rinse. This removes algae and pollution to restore the timber's surface, keeping it in good condition.
- To preserve the appearance of your timber, we recommend using a Hardwood Garden Furniture oil periodically.



Ennerdale 180cm Dining Table Product Code: 11900



A	В			
1 PC	4 PCS			

C	D	E	
M8	M8 X 60mm	M4	
8 PCS	8 PCS	1 PC	



General Warranty Conditions

The warranty applies to the original purchaser from the date of purchase and covers manufacturing faults and defects only. If an item should fail as a result of a manufacturing fault or defect under normal domestic use, the manufacturer at their discretion will repair, refinish or replace the failed item.

The manufacturer reserves the right to substitute failed items with a similar product should the model or colour no longer be available. Any replacement will be for the failed item only, not a complete set. The original warranty period is not extended in the event of a repair, refinish or replacements.

In the event of a failure, it is the **customer's** responsibility to return the item to the store of purchase along with a copy of the receipt. Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion, commercial use and damage caused as a result of failure

to observe reasonable care, maintenance and assembly instructions for both furniture and hardware.

Fern Living Bigby High Road, Brigg, NE Lincs, DN20 9HE For contact information please visit our website: www.fernliving.co.uk



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

WARNINGS

- Dispose of all packing carefully and responsibly.
- Place product on an even surface prior to using.
- Suitable for Domestic Garden use only.
- Children should not be left alone in situ with product, please refrain children climbing onto the product.
- Frequently check any damage to the product including the underside and tighten fixings where required.
- Please use appropriate furniture covers when not in use. With all product, it must be protected from the elements. If it is left in sunlight without covering, it will begin to fade in colour. Please make sure to remove all debris / dirt before covering.
- In order to prolong the life of your product, we recommend it be stored in a dry and protected area during off season periods.
- Do not use a pressure washer to clean your product.
- Check you have all the components and tools listed before assembly.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the parts during assembly, this could cause damage.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Do not stand on the seating.


CARE/CLEANING

- Do not use any abrasive substances which may scratch the surface.
- Remove all debris / dirt with soft bristle brush / cloth, use a clean cloth to wipe clean any problem areas. For thorough cleaning, use a mild soap and warm water, apply with a micro fibre cloth (no abrasive materials), wipe clean and let dry.
- Give your hardwood furniture a yearly scrub with soapy water, followed by a thorough rinse. This removes algae and pollution to restore the timber's surface, keeping it in good condition.
- To preserve the appearance of your timber, we recommend using a Hardwood Garden Furniture oil periodically.
- Sponge clean cushions only, For stubborn stains commercial available fabric cleaners are available please review application instructions and test on an inconspicuous area on product before using on your cushions.
- If an accidental spillage occurs blot clean spills immediately.
- Wash with water and gentle soap to keep it clean by a blot clean method do not rub.
- If an accidental spillage occurs blot clean spills immediately.

Montageanleitung Assembly instructions

Ennerdale Dining Chair Product Code: 11830




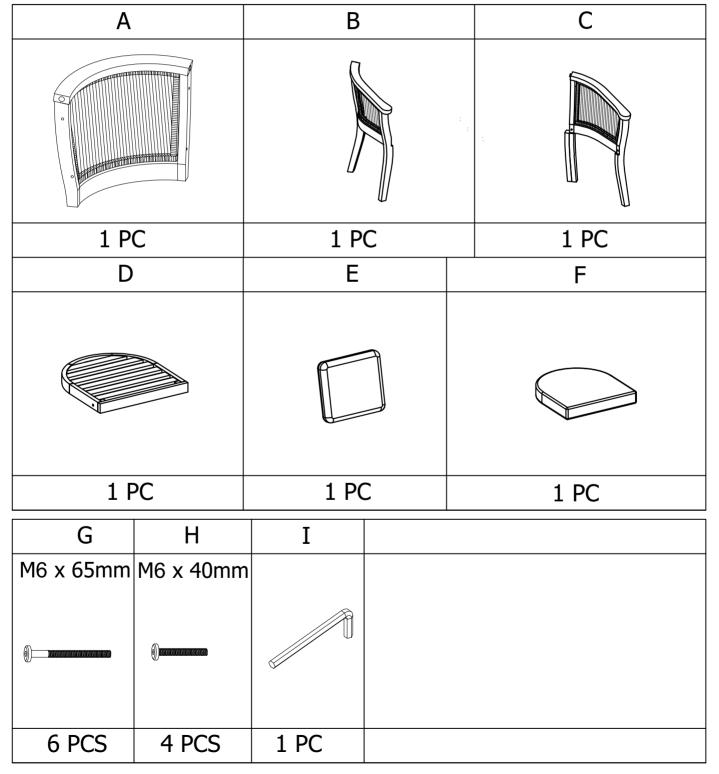




Ennerdale Dining Chair Product Code: 11830



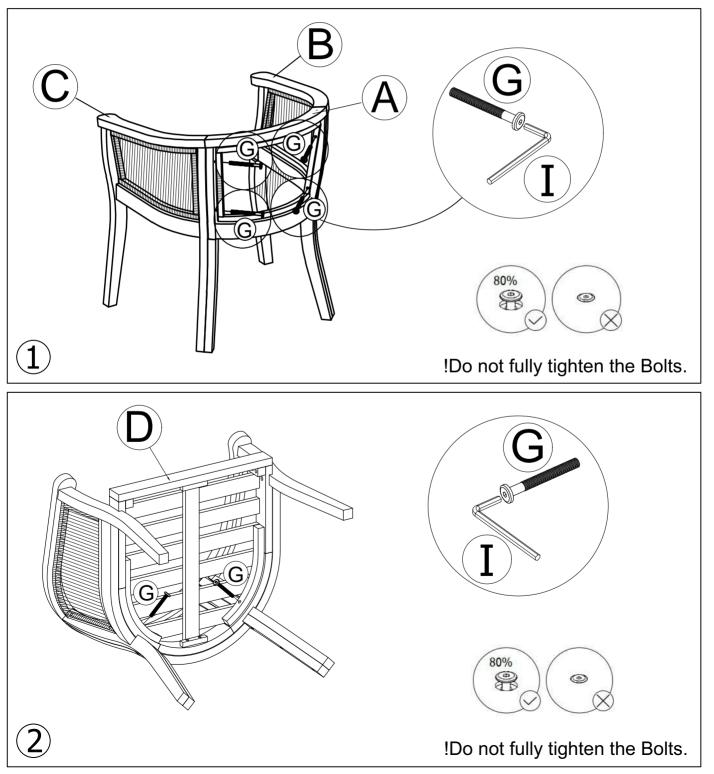

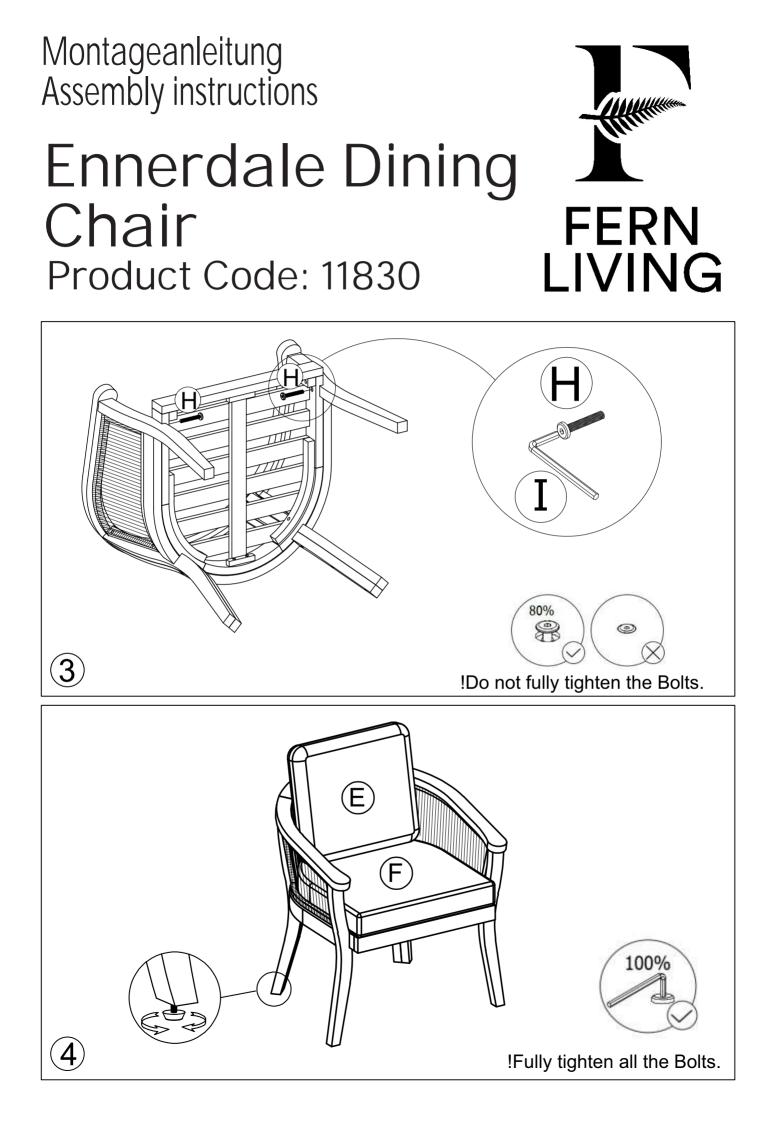

General Warranty Conditions

The warranty applies to the original purchaser from the date of purchase and covers manufacturing faults and defects only. If an item should fail as a result of a manufacturing fault or defect under normal domestic use, the manufacturer at their discretion will repair, refinish or replace the failed item.

The manufacturer reserves the right to substitute failed items with a similar product should the model or colour no longer be available. Any replacement will be for the failed item only, not a complete set. The original warranty period is not extended in the event of a repair, refinish or replacements.

In the event of a failure, it is the **customer's** responsibility to return the item to the store of purchase along with a copy of the receipt. Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion, commercial use and damage caused as a result of failure

to observe reasonable care, maintenance and assembly instructions for both furniture and hardware.

Fern Living Bigby High Road, Brigg, NE Lincs, DN20 9HE For contact information please visit our website: www.fernliving.co.uk